



POWER

RS232_INTERFACE

NET_INTERFACE

KEY&LED

LCM

IDE/USER_INTERFACE

SYSTEM

CF_CARD_INTERFACE

SRAM&FLASH

PACK_INTERFACE

Address: 0x82000000 --- 0x82FFFFFF

Bank0 宽度选择

Bank0/1 分配

Bank0 宽度选择

Address: 0x81000000 --- 0x81FFFFFF (Bank18)