

JTAG ADAPTER



Multi-Function Switching Board Support jtag jlink v8 v9 ulink2 st-Link arm stm32

Product description

The interface provided by the multifunctional adapter board is as follows:

Interface 1: 2.54 Spacing 20 Needles Bend Seat X 1 (JTAG Seat can be directly connected)

Interface 2: 2.54 Distance 20 pins straight socket X 1

Interface 3: 2.0 20-pin straight socket X 1

Interface 4: 2.54 14-pin straight socket X 1

Interface 5: 2.54 10-pin straight socket X 1

Interface 6: 2.0 10-pin straight socket X 1

Interface 7: 2.54 6-pin straight socket X 1

Interface 8: 2.54 4-pin straight socket X 1





