

1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---




1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---


	3	
--	---	--

[illegible]



4	5
---	---

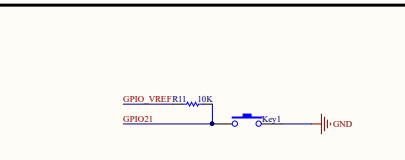


	6	
--	---	--

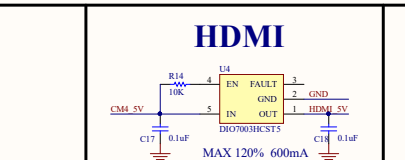

7	8
---	---

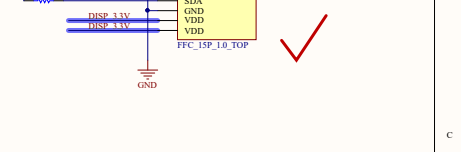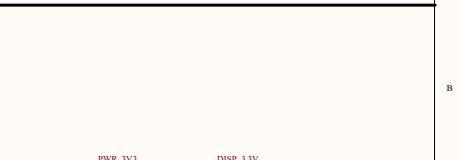

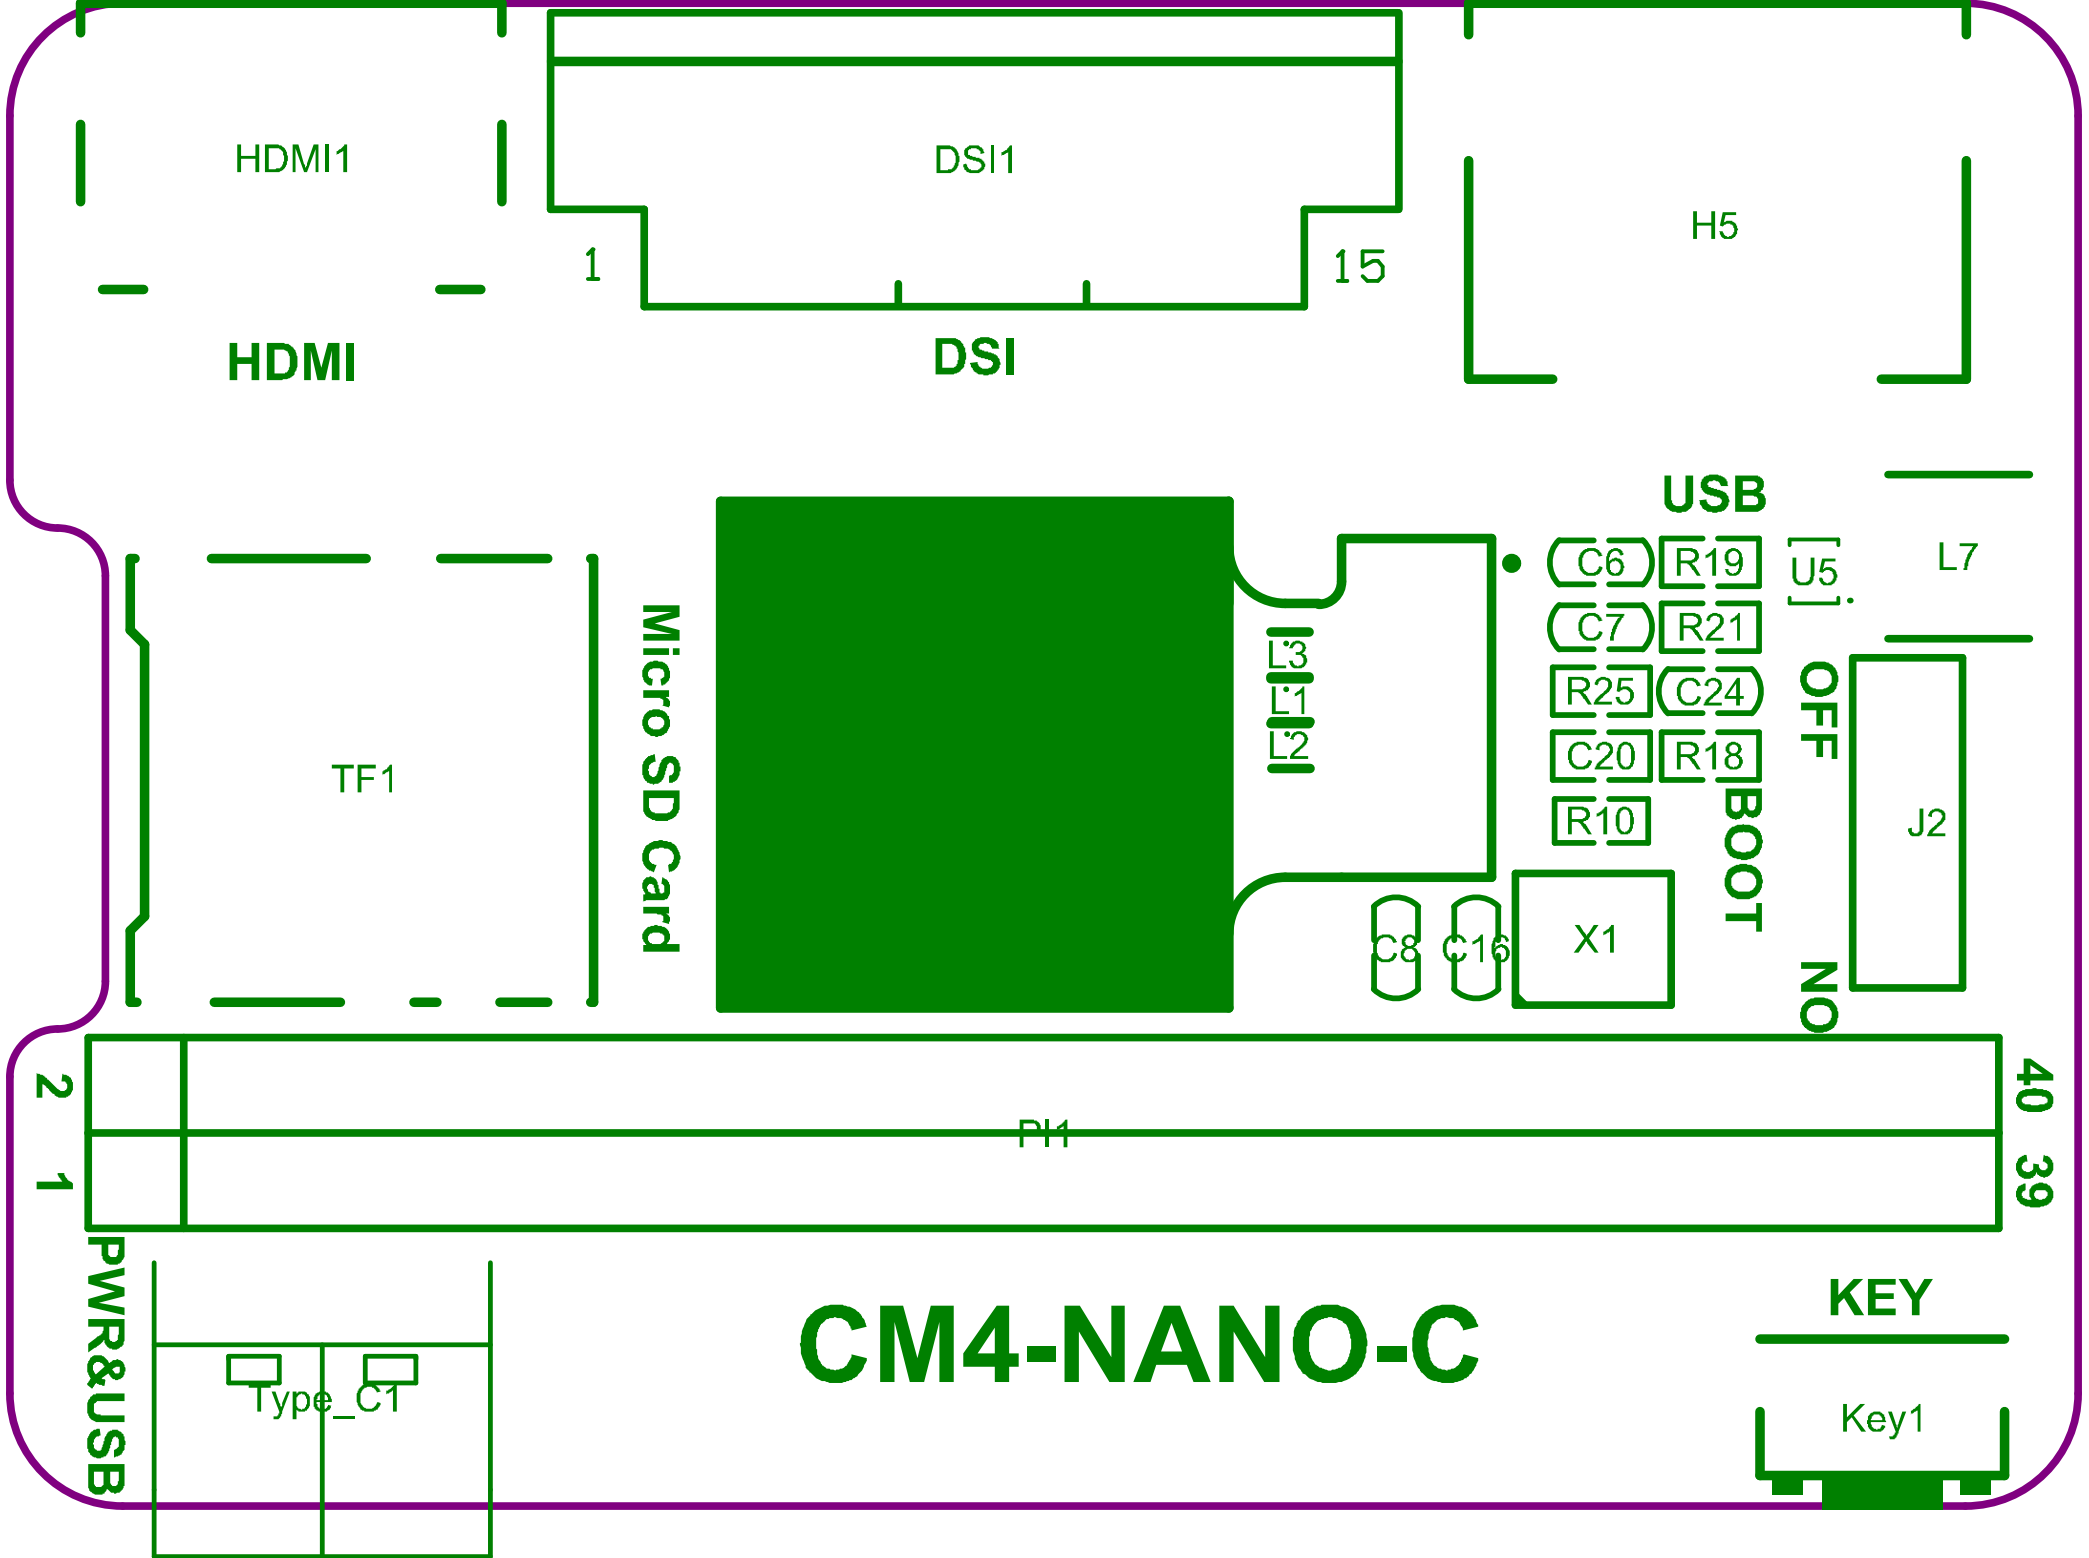

HDMI1

DSI1

H5

HDMI

DSI

USB

L7

U5

Micro SD Card

TF1

OFF

J2

NO

BOOT

C6

R19

C7

R21

R25

C24

C20

R18

R10

X1

C8

C16

L3
L1
L2

PH1

40 39


CM4-NANO-C

KEY

Key1

PWR&USB

 Type_C1



R33
R22
R24

U6


R28
CM-C1
Q4
Q3
R20
R35
C25
C27
C21
C23
R16
C22

BT-DIS	R32	IO-VREF	
WIFI-DIS	R31	1.8V	3.3V
WP-DIS	R29	RUN	GL-EN
		H4	
		H3	

CM-R1
C19
R14
C17
U4
C18
C31
R17
R15
C14
C15
C3
C2
C10
C9
R8
R5
H1
U2
U1
U3
U7
R30
C32
C1
C12
C5
FB1
C29
R34
C30

WiFi

 R11
R13
R12
ACK PWR
L6
L5



R1
R2
R3
C11
C4